

REMINGTON®

Body Waves™
20 HEATED ROLLERS



Model H-1080N

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following.

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER

DANGER

To reduce the risk of electric shock:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

WARNING

To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance is for household use only.
2. An appliance should never be left unattended when plugged in.
3. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.

5. Never operate this appliance if it has a damaged cord or plug; if it is not working properly; or if it has been dropped, damaged or dropped into water. Return the appliance to the Remington Customer Service Center for examination and repair.
6. Keep the cord away from heated surfaces. Do not wrap cord around the appliance.
7. Do not use an extension cord with this appliance.
8. Never block the air openings of the appliance or place it on a soft surface, such as bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
9. Never use while sleeping.
10. Never drop or insert any object into any opening.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not touch the posts that hold the rollers. They are hot.
13. Keep lid open when heating rollers.

SAVE THESE INSTRUCTIONS

Operating & Maintenance

Operating Instructions

1. This appliance is designed to work on ordinary household current only (120 volts, 60 cycles AC). It is not intended for commercial use.
2. Place the unit on a hard, flat, heat resistant surface.
3. **Open lid** and plug cord into outlet. **Please note that damage to the unit could occur if heated with the lid closed.** When unit is heated, follow instructions shown for use. When finished applying rollers in hair unplug unit and allow to cool before closing lid or storing away.
4. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Never try to defeat this safety feature.

Maintenance Instructions

1. Clean unit with damp cloth only. No other maintenance is required.
2. Rollers may be cleaned with a damp cloth and mild detergent or soap.
3. Store appliance and cord where they will not be damaged.
4. Do not wrap cord around appliance.
5. Do not attempt to repair the appliance yourself. Return to Remington Customer Service.

Product Features

Body Waves™ 20 HEATED ROLLERS



- **OPEN LID WHEN IN USE.**
- 20 rollers come in three sizes — 6 large, 10 medium, 4 small for most hair types and styles.
- Rollers have the Remington exclusive high-energy wax core that retains heat longer for curls that last.
- Body Waves™ is thermostatically controlled, rollers cannot overheat; they will feel warm to the touch.
- Use on dry or slightly damp hair, never wet.
- Ready dot darkens when rollers are ready to use.
- Custom clips are easy to use and hold rollers in place.
- Ring around post indicated correct roller placement.

Long and Wavy

For long, voluminous, smooth waves, use the large rollers. Roll the top, front layer of hair back to your crown, using one roller. Next, use three other large rollers to roll the remaining hair in three equal sections on the back and sides of the head. Roll the hair under, up the nape of the neck. Leave rollers in place for about five to ten minutes. Unwind, don't pull, "remove" the rollers out in the order you put them in, and let the curl cool for a minute to "set". Lean forward and brush hair through. Toss head back and smooth, brushing top to one side and turning ends under.

Short and Chic

Use two or three of the small sized rollers to roll the top, front layer of your hair back to the crown. Then randomly, place the remaining medium sized rollers around the back and sides of the head, rolling all the curlers under. Leave rollers in place for approximately ten minutes. Unroll curlers in the order that you put them in, let the curl cool for a minute to "set" and then use your fingers to separate and shape. Spritz hair for extra hold.

The Flipped Bob

Use a large sized roller on a large section of the hair on your crown to give height. Roll the hair back and under towards crown. Next, take large sections all around the sides of your head, and roll up so the hair will flip out. You should roll curlers up to the level of the top of your ear. Leave rollers in place for approximately ten minutes. Unroll curlers in the order that you put them in, let the curl cool for a minute to set. Next, brush hair out, using your hand to shape the flip outward. Spritz for extra hold.

Quick Touch-Ups - To add some fullness before an evening out, here are some tips:

Short Hair: Use a few small sized rollers in the front section of hair, and mist with hairspray. Remove after just 30 seconds to add fullness. Let cool, and separate curls with finger.

Medium Hair: Use several medium sized rollers to add more flip to your bob, rolling ends of hair so hair flips out. Mist with hairspray, and remove after about 1 minute. Remove rollers, let cool, and brush hair to smooth.

BODY WAVES™ HEATED ROLLERS

Before setting, hair should be dry or only slightly damp, never wet. When the red dot on roller top turns black, they are ready to use. Rollers take approximately 12 minutes to heat.



Section hair and comb it smooth. Roll hair as usual, in the direction of desired style. Secure each roller with the correct size clip.



Continue until your entire head is set. The time the rollers are left in the hair regulates the tightness of the curl. The shorter the time, the softer the curl. Unplug the unit. Rollers will remain curling active approximately 15 minutes.

 


To release secured roller, remove each clip and roller gently. Unwind, never pull. Let each new curl spring back into position and cool for a moment. Then brush out hair and style. Spritz hair for extra hold.

Special Offer

Be Kind To Your Hair With Kindness® Clips From Remington®

Kindness® Clips hold in gentle heat for long-lasting curls. Use with any size, any brand of rollers; Steam, Mist or Dry.

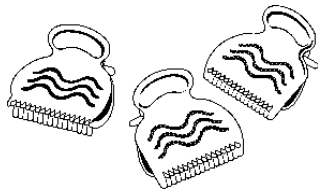

To order clips-see the accessory order form.

Accessory Order Form

Accessory Order Form Body Waves™

For extra rollers or clips, fill out this form and send check or money order to: Remington Products Company, L.L.C., P. O. Box 1536, Horsham, PA 19044-6536.

Item	Model	Price	Qty.	Amount
6 Small Rollers+Clips	67601	\$4.50		\$
6 Medium Rollers+Clips	67602	\$5.50		\$
6 Large Rollers+Clips	67603	\$6.75		\$
12 Kindness Butterfly Clips	C-312	\$8.99		\$
* Sales tax payment required in these states:AL,AZ,CA,CT,FL,GA,IL,IA,IN,KY,LA,MA,MD,MI,MN,MS,NC,NE,NJ,NY,OH,OK,PA,SC,TX,VA & WA.			Subtotal	\$
** Applies only to postage inside Continental U.S. Additional postage will be added for foreign delivery. Prices subject to change without notice. Allow 4 to 6 weeks delivery.			*Sales Tax	\$
			**Postage	\$3.50
			TOTAL	\$

Name _____

Address _____

City _____

State _____ Zip _____

We must have a street address,as UPS cannot deliver to a P. O.number. Fill out completely.

☎ Questions or comments call 1-800-736-4648

REMINGTON

Products Company, L.L.C.
60 Main Street
Bridgeport, CT 06604

Remington and Body Waves are trademarks of Remington Corporation, L.L.C.
Kindness is a registered trademark of Clairol, Inc.
©1999 R.P.C., L.L.C. Rev.1/99 Job No. 98-264 Part #12787

Warranty Service

Full Two-Year Warranty

Remington Products Company L.L.C. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to: Remington Products Company, L.L.C. 60 Main Street, Bridgeport, CT 06604, Attention: Customer Service Department. Include a letter indicating the reason for the return.

REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

REMINGTON MONEY BACK OFFER

If within 90 days after you have purchased your Remington hairsetter, you are not satisfied and would like a refund, take back the setter and sales slip indicating purchase price and date of purchase to the retailer from whom the setter was purchased. Remington will reimburse all retailers who accept the setter within 90 days from the date of purchase. If you have any questions concerning the money back guarantee, please call 1-800-736-4648.



This product is Listed by Underwriters Laboratories, Inc. and bears the mark



Questions or Comments: Please call 1-800-736-4648.



Visit us at <http://www.remington-products.com>

120 VAC 60 Hz

REMINGTON
PRODUCTS COMPANY, L.L.C.
60 Main Street Bridgeport, CT 06604

Remington and Body Waves are trademarks of Remington Corporation,L.L.C. Kindness is a registered trademark of Clairol, Inc. ©1999 R.P.C., L.L.C. Rev. 1/99 JOB # 98-264 Part # 12787